

123-124 SERIES OPERATING INSTRUCTIONS

Operating Instructions:

1. Insert connector onto test piece. Make sure a minimum of .460" of engagement is achieved. This will ensure proper seal life and gripping ability.



2. Cam the handle 90°.



3. Introduce test media through the 1/8" NPT charge port.



4. After your test is completed vent the system then remove connector.

Adjustment:


1. If the RAMSEAL® connector is not sealing properly some adjustment may be needed.
2. The adjusting nut and body are set using Loctite® from the factory. Uses a 1-1/8" wrench to break the Loctite® loose.
3. Counterclockwise to tighten.



4. Clockwise to loosen.



Replacement Parts and Assembly Diagram:

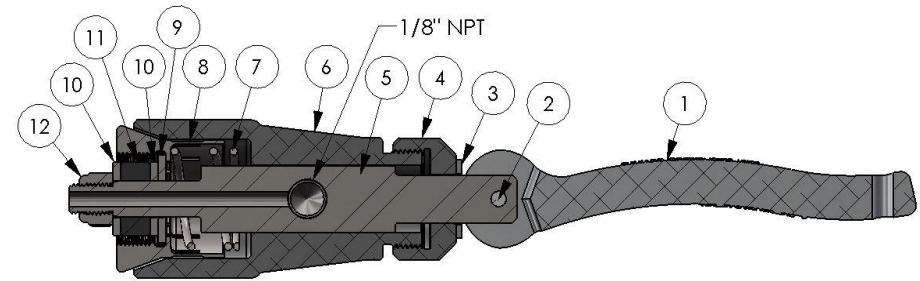

ITEM NO.	MODEL 123	MODEL 124	DESCRIPTION
1	12302	12402	Handle
2	12303	12403	Handle Pin
3	12312	12412	Wear Washer
4	12331	12431	Adjusting Nut
5	12328	12428	Shaft
6	12301	12401	Body
7	12307	12407	Spring
8	12306-*	12406-*	Collet
9	12315-*	12415-*	Tube Stop
10	12315-*	12415-*	Seal Stop
11	12308-*	12408-*	Seal
12	12317	12417	Seal Stop Nut

* Specify Model Number, and /or Tube I.D. and O.D.