

77 SERIES OPERATING INSTRUCTIONS

Operating Instructions:

1. Insert connector into test piece. Make sure a minimum of 1.200 of engagement is achieved. This will ensure proper seal life and gripping ability.



2. Cam the handle 90°.



3. Test media can be introduced through the 1/8" NPT charge port.




4. After your test is completed vent the system then remove the connector.

Adjustment:


1. If the RAMSEAL® connector is not sealing properly some adjustment may be needed.
2. Counterclockwise to tighten



3. Clockwise to loosen

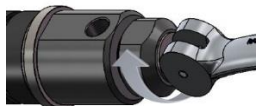

Replacement Parts and Assembly Diagram:

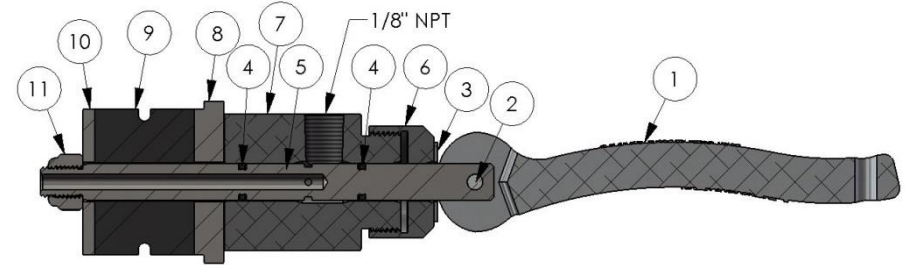

ITEM NO.	PART NO.	DESCRIPTION
1	7702	Handle
2	7703	Handle Pin
3	7712	Wear Washer
4	7724	Quad Seal (Shaft)
5	7728	Shaft
6	7731	Adjusting Nut
7	7701	Body
8	7705-*	Head Washer
9	7708-*	Seal
10	7712-*	Bottom Washer
11	7717	Seal Stop Nut

* Specify Model Number, and /or Tube I.D. and O.D.